BRACKETS FOR CONSTANT HANGER TYPE 11

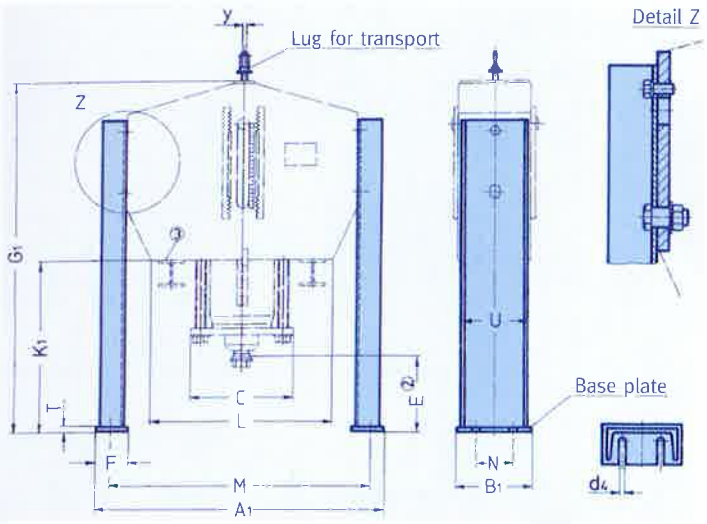

Brackets for constant hanger type 11
type 71 C3 .9 to 71 96 .5
Series-made standard design available from stock.
The brackets can be supplied according to requirements, either shop fitted or supplied separately for subsequent fitting on site.

Const h. Brackets Type	Type①	A_1	B_1	C	d_4	E②	F	G_1	K_1	L	M	N	T	U	y	Weight (kg)
11 C3 19	71 C3 .9	420	70	150	12	265	40	810	355	250	395	-	6	60	14	5
11 D2 19	71 D2 .9	370	70	155	12	145	40	510	260	230	345	-	6	60	14	5
11 D3 19	71 D3 .9	480	70	170	12	265	40	825	380	260	455	-	6	60	14	8
11 12 15	71 12 .5	495	115	140	12	145	60	535	270	285	440	50	8	100	14	12
11 13 15	71 13 .5	525	115	140	12	265	60	925	480	285	470	50	8	100	14	17
11 22 15	71 22 .5	575	140	180	12	145	75	545	275	350	505	65	8	120	14	15
11 23 15	71 23 .5	590	140	185	12	265	75	930	475	360	520	65	8	120	14	21
11 32 15	71 32 .5	575	140	190	12	150	75	560	285	360	505	70	10	120	18	16
11 33 15	71 33 .5	620	140	190	12	270	75	965	495	360	550	70	10	120	18	23
11 34 15	71 34 .5	655	140	190	12	390	75	1380	730	360	585	70	10	120	18	32
11 35 15	71 35 .5	725	140	200	12	510	75	1785	955	370	655	70	10	120	18	40
11 42 15	71 42 .5	640	160	220	14	155	80	620	305	400	570	80	10	140	18	18
11 43 15	71 43 .5	710	160	220	14	275	80	1040	545	410	640	80	10	140	18	29
11 44 15	71 44 .5	750	160	220	14	395	80	1490	815	410	680	80	10	140	18	41
11 45 15	71 45 .5	805	160	240	14	515	80	1910	1055	420	735	80	10	140	18	49
11 52 15	71 52 .5	750	200	270	18	160	90	660	315	490	670	110	12	180	18	30
11 53 15	71 53 .5	870	200	270	18	280	90	1080	565	490	790	110	12	180	18	42
11 54 15	71 54 .5	905	200	285	18	400	90	1535	830	490	825	110	12	180	18	58
11 55 15	71 55 .5	1005	200	285	18	520	90	1955	1075	490	925	110	12	180	18	72
11 62 15	71 62 .5	915	250	335	23	165	110	755	335	580	815	135	12	220	18	45
11 63 15	71 63 .5	1005	250	335	23	285	110	1220	655	580	905	135	12	220	18	62
11 64 15	71 64 .5	1035	250	345	23	405	110	1725	975	600	935	135	12	220	18	90
11 65 15	71 65 .5	1075	250	345	23	525	110	2190	1265	600	975	135	12	220	18	112
11 66 15	71 66 .5	1335	250	345	23	345	110	2410	1080	600	1235	135	12	220	18	112
11 72 15	71 72 .5	980	270	380	27	175	115	830	375	650	875	135	15	240	18	56
11 73 15	71 73 .5	1050	270	380	27	295	115	1285	650	650	945	135	15	240	18	80
11 74 15	71 74 .5	1200	270	400	27	415	115	1835	1050	650	1095	135	15	240	18	106
11 75 15	71 75 .5	1360	270	400	27	535	115	2290	1315	660	1255	135	15	240	18	128
11 76 15	71 76 .5	1475	270	400	27	280	115	2475	1050	660	1370	135	15	240	18	128
11 82 15	71 82 .5	1025	280	390	33	180	120	935	350	650	935	140	15	240	18	65
11 83 15	71 83 .5	1155	280	390	33	300	120	1490	775	650	1065	140	15	240	18	91
11 84 15	71 84 .5	1320	300	400	33	420	120	2115	1190	670	1230	140	15	260	18	139
11 85 15	71 85 .5	1410	320	420	33	540	120	2675	1560	690	1320	140	15	280	18	184
11 86 15	71 86 .5	1470	320	420	33	270	120	2905	1280	690	1380	140	15	280	18	184
11 92 15	71 92 .5	1105	300	435	33	190	140	1010	380	750	995	140	20	260	18	82
11 93 15	71 93 .5	1335	300	435	33	310	140	1560	775	750	1225	140	20	260	18	109
11 94 15	71 94 .5	1480	320	455	33	430	140	2225	1265	770	1370	140	20	280	18	162
11 95 15	71 95 .5	1495	340	455	33	550	140	2770	1680	770	1385	140	20	320	18	273
11 96 15	71 96 .5	1545	340	455	33	260	140	3020	1400	770	1435	140	20	320	18	273

① The 5th digit of the type description indicates the design:
6 for brackets bolted on, standard specification.
7 for loose brackets, standard specification.
8 for brackets bolted on, nuclear specification.
9 for loose brackets, nuclear specification.

② E in the uppermost blocking position. In other positions, E decreases accordingly.

③ Constant hangers can be seated directly on the structure and welded in place. When doing this, care must be taken to provide access to the adjusting screws and lock nut.
If this access cannot be provided, type 71 brackets should be used.

Order details:
Constant hanger
type 11 .. .. with bracket
type 71 .. ..
Marking:
Operating load: ...kN,
Travel: ...mm up/down
Blocking position
(if required):